


Instructions for Using the Karaoke Machine rented from *Herriott's*

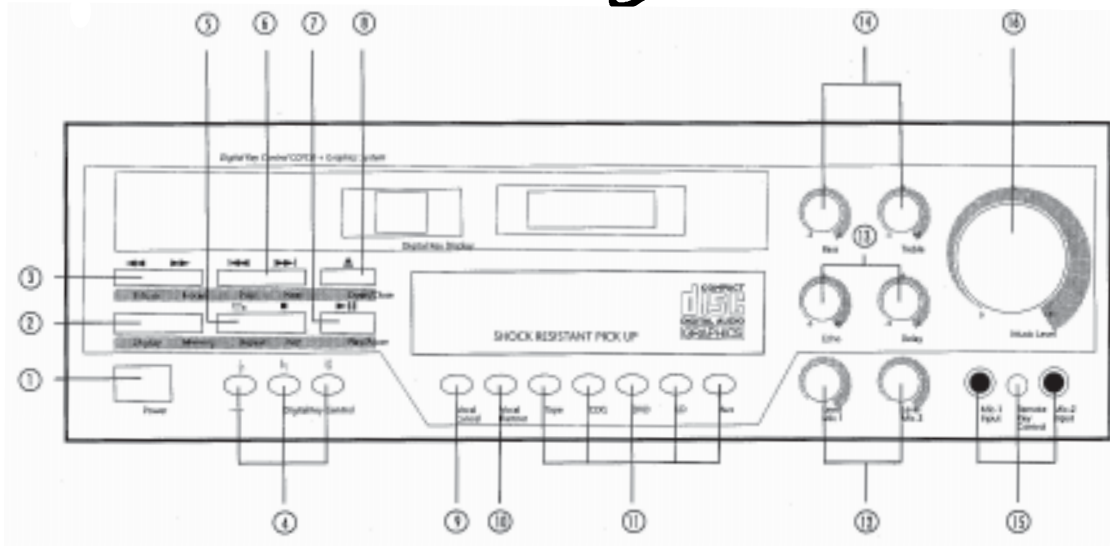

- ① Select a secure location for Karaoke Machine convenient to where performers will be located and near an AC power supply (wall outlet).
- ② If using a video display (TV monitor) for Sing Along display, plug monitor cable (Yellow ends) into "Video Output" jack located on back side of Karaoke Machine and then plug other end of monitor cable into monitor.
- ③ Connect Karaoke Machine AC and TV monitor power cords to wall outlet.
- ④ Press Power Button #1 to turn machine on or off. (If using TV monitor - Turn monitor on.) NOTE: If using CD's be sure "CDG" light #11 is on. If not press CDG button.
- ⑤ Connect microphones by inserting jack for each microphone in to Mic-1 and Mic-2 inputs #15 located on right front of Karaoke Machine. BE SURE MICROPHONE VOLUME CONTROLS (#12) ARE TO MINIMUM VOLUME WHILE CONNECTING MICROPHONES (Turn controls to left).
- ⑥ TO LOAD CD DISC: Press "Open/Close" button #8 to open CD disc tray. Carefully lay CD onto tray holder and press button #8 again. Tray will close.
- ⑦ Select track to be played by pressing Prev/Next button #6 until selected track number is shown in display window.
- ⑧ Press Play/Pause button #7 to begin music. Adjust volume (#16) and Bass/Treble (#14) to desired levels. That's all there is to it. You're now ready to start your performance.

When finished:

Remove CD from disc tray; Close (Open/Close button #8) CD tray properly back in machine; Turn power off; unplug power supply from power source; unplug TV monitor; unplug microphones; store all cables, microphones and CD's in provided transportation containers. Transport in a secure and dry environment.

OTHER BUTTON FUNCTIONS

DISPLAY/MEMORY BUTTON (#2):

Display: Press this button at anytime to display the remaining program time and the track number.

Memory: Use this function to program priority of tracks to be played back. Instructions to use memory:

- a. Load disc.
- b. Press memory button, you'll see program 1 on the display window.
- c. Select the first track number by pressing track previous or next button (#6).
- d. Press memory button once to program the track number.
- e. Press memory button again to confirm programmed track number.
- f. Repeat steps c and d to program up to 20 tracks at your desired order.
- g. When done programming, press the play button to enjoy your programmed tracks. (NOTE: To cancel the program at any time, just press the open/close button.

B-SCAN/F-SCAN BUTTON (3):

Press this button to scan CD forward or backward.

DIGITAL KEY CONTROL BUTTON (#4):

b - Press this button to change key of the song 1/4 step down to a maximum of 9 times.

- Press this button to change key of the song 1/4 step up to a maximum of 9 times.

REPEAT/STOP BUTTON (#5):

Repeat: Press this button to repeat the track.

Stop: Press this button to stop the disc.

VOCAL CANCEL & PARTNER BUTTONS (#9 & #10):

Vocal Cancel: Press this button to take off the vocal on the recorded multiplex karaoke disc.

Vocal Partner: Press this button to sing along with the recorded vocal on the multiplex karaoke disc.

MIC1 and MIC2 VOLUME CONTROLS (#12): Adjusts mic volume.

ECHO/DELAY BUTTON (#13): Echo Button: Adjusts the parameter (-5 to +5) to control the echo effect of microphones 1 and 2.

Delay button: Adjusts the repetition interval of the echo.

Thank you for renting from

Herriott's
Rents • Tents • Events

2100 S Neil
Champaign
217/356-9713