


Buhl Overhead Projector SETUP

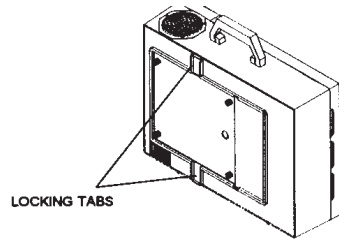

1. Set the projector on a firm surface. Locate the two (2) locking tabs on the underside of the projector.

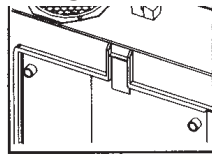


figure 2-b

2-b: Tabs inward for closed projector

2-c: Tabs outward for opening setup.

2-d: Tabs inward and engaging slots for locked open position.

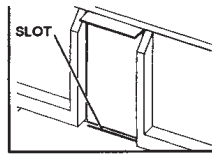


figure 2-c

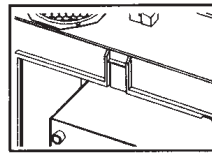


figure 2-d

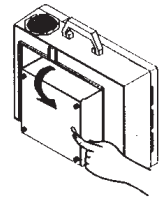


figure 3

3. With projector on its side, pull two (2) release tabs outward. Use finger hole to fully extend base. Lock base by pressing two (2) release tabs inward to engage slots.

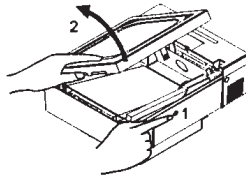


figure 4

4. With projector upright, press release button inward. While holding release button in, completely open top cover.

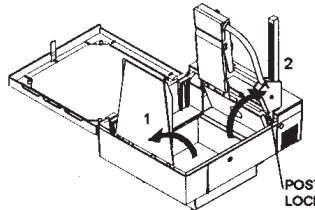


figure 5

5. Gently swing mirror assembly completely upward. Remove power cord and set aside. Lift post to gently raise head assembly upward until it locks into position. Release this lock for disassembly.

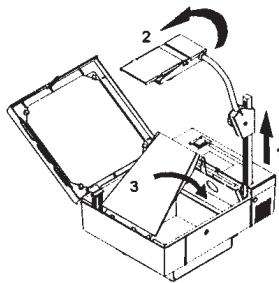


figure 6

6. Turn focus knob to bring projection head almost completely upward. Gently swing projection head into its working position. Gently swing mirror back into body of projector.


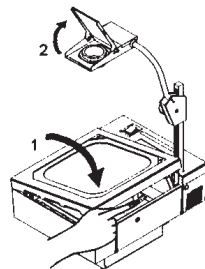




figure 7

7. Completely close top cover. Press in on release button to allow it to clear projector body. Lift projection head mirror completely upward.


OPERATION TIPS

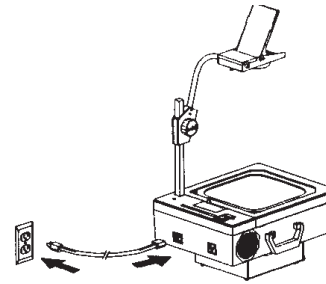

- Extend the power cord and place the female end into the power supply socket. Plug the other end into a properly grounded outlet.

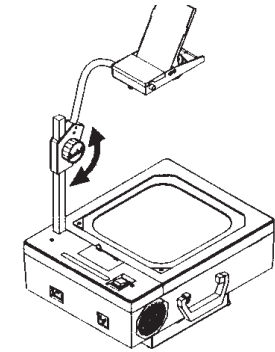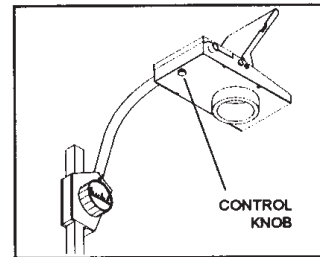

- Focus is achieved by turning the knob on the post assembly to move the projection head up or down.
- The convenience outlet may be used to provide power for accessories.

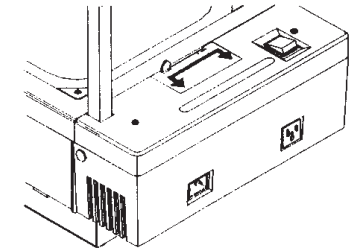

Optical focus compensation control: When projecting an image at an angle at greater than 10° the knob on the underside of the projection head is used to correct image focus for best resolution. Turn the knob to adjust the tilt of the projection head until the best projected image is achieved.

The lamp changer tab allows quick activation of spare lamp in the event of a lamp burning out. **Turn projector off before moving lamp changer tab.** The spare lamp is activated by first pushing the tab forward, then across and into the opposite recess.

CAUTION.



Turn Lamp OFF BEFORE:

- Moving Lamp Changer Tab
- Moving Projector



Do Not Block Any of the Intake/Exhaust Vents during projector operation.

Herriott's
Rents • Tents • Events

2100 South Neil • Champaign
217/356-9713